

# KAMBROOK



## Jaguar Vacuum Cleaners



## **Welcome to Kambrook and your new Jaguar Vacuum Cleaner.**

At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions:

### **Read all instructions thoroughly before activating the appliance and retain them for future reference.**

Ensure that the power source to be used is the same as the voltage requirements of the product.

Always switch appliance to off, then switch off at the power outlet, then unplug the appliance when not in use and prior to cleaning or replacing dust bags or filters.

Never use the vacuum without a dust bag or motor protection filter installed

Never use the vacuum to vacuum hot ashes, broken glass, sharp objects or liquids

Never use in the presence of explosive liquids or vapours

Never vacuum up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never vacuum up acids, asbestos or asbestos dust.

This vacuum is not intended for use by young children or infirm persons, without supervision.

Do not leave the appliance unattended when in use. Young children should be supervised to ensure that they do not play with the appliance.

Close supervision is required at all times when operating the vacuum near children.

Do not store or leave the vacuum near hot ovens or heating appliances.

This appliance is suitable for domestic use only. Do not use this appliance for anything other than its intended use.

 
Do not use or store outdoors.

Fully extend the cord (to the yellow or red tape mark) whenever the vacuum cleaner is in use.

Regularly inspect the supply cord, plug and actual appliance for any damage.


If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Kambrook service centre for examination, replacement or repair.

## Features of your Kambrook KVC11 Jaguar Vacuum Cleaner

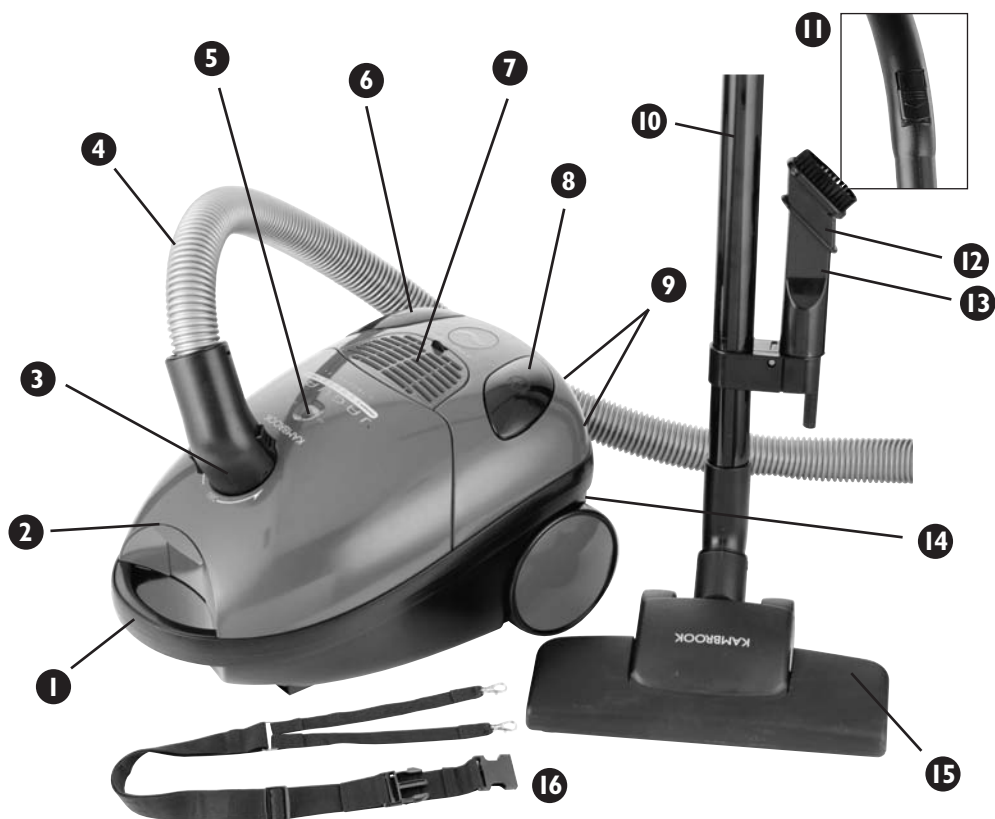

- |   |                                |
|---|--------------------------------|
| 1. Carry handle                           | 9. Carry strap connection tabs |
| 2. Dust bag compartment lid release lever | 10. 2 x wands                  |
| 3. Hose inlet connection point            | 11. Finger tip suction control |
| 4. Crush proof hose                       | 12. Brush attachment           |
| 5. Dust bag indicator                     | 13. Crevice tool               |
| 6. On/off foot pedal                      | 14. Cord storage outlet        |
| 7. Micro filter                           | 15. Floor head                 |
| 8. Cord rewind foot pedal                 | 16. Carry strap                |

## Features of your Kambrook KVC12/15/16 Jaguar Vacuum Cleaners

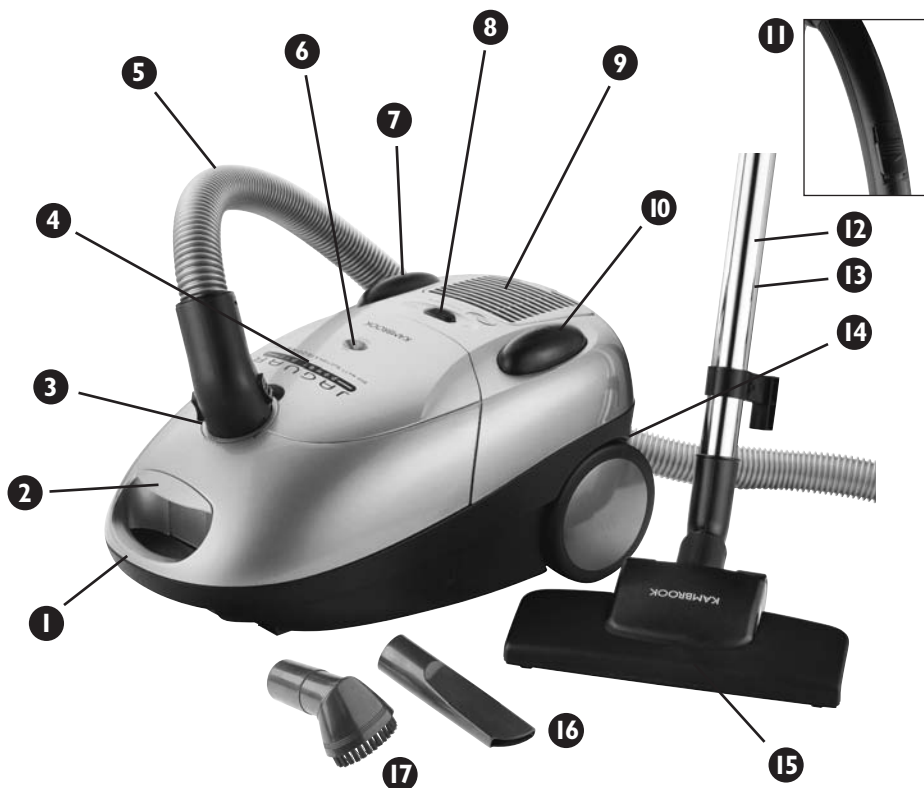 

- |  |                                |
|--|--------------------------------|
| 1. Carry handle                                  | 10. Cord rewind foot pedal     |
| 2. Dust bag compartment lid release lever        | 11. Finger tip suction control |
| 3. Hose inlet connection point                   | 12. Telescopic wand (KVC16)    |
| 4. On board tool storage compartment             | 13. 2 x wands (KVC12,15)       |
| 5. Crush proof hose                              | 14. Cord storage outlet        |
| 6. Dust bag indicator                            | 15. Floor head                 |
| 7. On/off foot pedal                             | 16. Crevice tool               |
| 8. Variable power control (KVC15 & 16)           | 17. Brush tool                 |
| 9. HEPA filter (KVC15 & 16) Micro filter (KVC12) |                                |

## Using Your Kambrook Jaguar Vacuum Cleaner

Remove all packaging from the unit, hose and other accessories; ensure that you have removed all of the accessories before discarding the packaging.

Ensure that the dust bag and filters are correctly fitted.

Locate the crush proof hose and push the connection point into the hose inlet connection on the top of the unit, until a “click” sound is heard.

KVC11,12,15 only.

Connect the wands together by placing the narrower end inside the wider end of the other wand and push together firmly.

Model KVC16 only features a telescopic adjustable height wand. To extend the wand push the extension lever in the direction of the arrow (printed on the lever) and pull out the narrower tube to the desired height.

Connect the wide end of the connected wands (or telescopic tube [KVC16]) on to the hose end, and push together firmly.

Fit the floor head to the narrow end of the wand/s and push together firmly.

Fully extend the power cord by pulling the power plug (situated at the rear of the unit) out from the unit, until the yellow tape on the cord is shown.

**ENSURE THAT YOU DO NOT OVER EXTEND THE POWER CORD - DO NOT EXTEND PAST THE RED WARNING TAPE ON THE CORD**

Plug into a 230/240v power point and switch the power on.

To commence vacuuming push down on the on/off foot pedal, at the top, rear of the unit ①.

For full suction power ensure that the fingertip suction control cover (on the hose handle) is closed.

### Variable Power Control (models KVC15 and 16 only)

The variable power control slide switch is located on the top of vacuum. Slide the control to the ‘MAX’ position for vacuuming hard floors and carpet surfaces and to ‘MIN’ position when using the accessory tools.

When vacuuming is complete, push down on the ‘on/off’ pedal to switch off.

Turn the power off at the outlet and then remove the power cord from the power outlet (when removing plug from the power outlet grasp the plug not the cord).

To retract the cord push down on the ‘cord rewind’ pedal.

**IMPORTANT: HOLD THE PLUG END WHEN RETRACTING THE CORD TO PREVENT IT FROM STRIKING YOU OR THE VACUUM.**

**⚠ ALWAYS ENSURE THAT THE DUST BAG AND THE MOTOR PROTECTION FILTER ARE CORRECTLY FITTED. NEVER OPERATE WITHOUT THE DUST BAG OR FILTERS IN PLACE.**

## Crevice and brush tool accessories

The crevice tool is ideal for vacuuming hard to reach places such as the edges along skirting boards.

The brush tool can be used to vacuum delicate surfaces and areas such as shelves and venetian blinds.

For models with Variable Power Control, set between Minimum and Medium power when using the tool accessories.

For models without Variable Power Control, slide the Fingertip Suction Control cover (located on the hose handle) to the open position.

### Models KVC12/KVC15 and KVC16

Separate crevice and brush tools are located inside the on-board tool storage compartment. The opening for this compartment is located directly below the hose connection inlet. To open place a finger inside the thumb groove and pull the compartment lid upwards.

### Model KVC11 only

The crevice tool with detachable brush attachment can be stored on the wand attachment for easy access and storage.

To use the crevice tool, detach the brush attachment from the top to reveal the crevice tool. When the brush attachment is required, push the back onto the top of the crevice tool until it is firmly in place.



Turn off the vacuum when changing any attachments.

## Using the Park Tool feature

The vacuum features a 2-way park tool feature, which allows you to easily store the wands with the floor tool directly on the vacuum body. This is ideal when storing the vacuum or if you need to temporarily 'park' the vacuum while you are cleaning.

### To park the vacuum in the upright (storage) position

The park tool attachment hook, for upright storage is located on the lower wand.



With the vacuum switched off and unplugged from the power point, place the vacuum on its end (in an upright position), insert the park tool hook into the park tool receptacle on the underside of the vacuum body (located to the upper right of the front wheel).

*Note: The floor tool should be attached and in contact with the floor to give stability, if correctly assembled.*



### To park the vacuum in the horizontal position

The park tool attachment hook, to park the vacuum in the horizontal position, is located on the floor tool head (on the wand connection point).

With the vacuum on the floor in a horizontal position, hold the floor tool head facing outwards and insert the park tool hook into the park tool receptacle located at the rear of the unit.



## Replacing dustbag and filters

### Dust bag indicator and changing the dust bag

The dust bag should be changed when full. The dust bag indicator window will gradually turn red as the bag fills up and when the dust bag indicator displays 'red' it is time to change the dust bag.

Always switch appliance to off, then switch off at the power outlet, then unplug the appliance prior to replacing dust bags or filters.

To remove the dust bag, have the unit down on its wheels, remove the crush proof hose and then lift the 'Dust bag compartment lid release lever' and pull the top cover back (Fig. 1/2-A)

To remove the bag, grasp the top of dust bag and pull out (Fig. 2-B), and dispose in a rubbish bin.

Fig. 1. KVC11


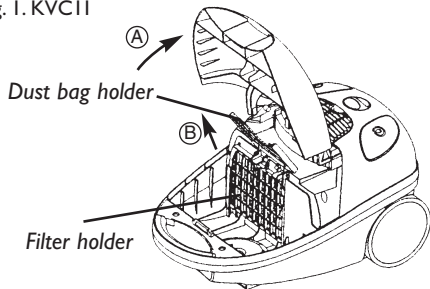 


Fig. 2. KVC12/15/16

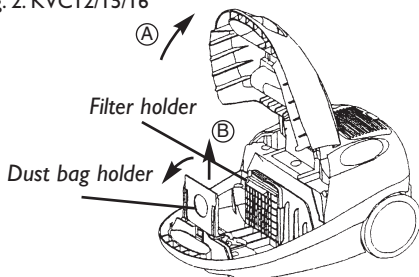 

To place a new dust bag, take a fresh dust bag and with the arrow (printed on the cardboard section of the dust bag) pointing down, slide the cardboard down into the dust bag holder, until it comes in contact with the bottom of the holder.

*HINT: once the bag is inserted 'puff-out' the bag as much as possible to ensure the full capacity of the bag can be taken up. When vacuuming fine dust particles, the fine dust particles can clog the pores of the dust bag and the dust bag indicator will indicate full. If this happens the bag could appear relatively empty, however the bag will still need to be changed to avoid strain on the motor.*

*NOTE: The bag compartment lid may not close if the bag is not correctly fitted.*

### IMPORTANT: DO NOT USE THE UNIT WITH OUT A DUST BAG IN PLACE

 
#### Replacing filters

Filters must be cleaned from time to time to remove the fine dust particles that have been collected. This can be done by shaking them, however after approximately 5 dustbag changes the filters should be replaced.

#### Motor protection filter


The motor protection filter must always be in place when operating the vacuum otherwise damage to the motor may occur. To replace the motor protection filter - Remove the dustbag or pull the bag forward. The motor protection filter is located at the rear, right hand side of this

KVC12/15/16

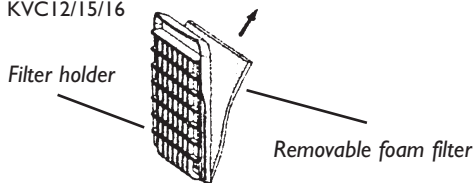



KVC11

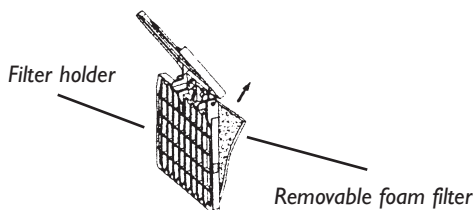 

inner chamber. Pull the plastic filter holder upward to remove. Remove foam filter from holder.

### HEPA and Micro dust filter

Replacing the micro dust filter (models KVC11 & 12) or HEPA filter (models KVC15 & 16) - Remove the filter cover at the top rear of the vacuum by pulling up on the back tab. Remove the filter from the cover (KVC11) or remove from cavity (KVC12/15/16),



Above: KVC12/15/16

Below: KVC11



### Attaching the carry strap (KVC11)

Unclasp the attachment clip and thread the flat edged piece through the carrying handle, clip the two ends together.



Ensure that the strap has no twists and connect the strap to the other end of the unit by taking the two metal clips on the strap and connect them to the two strap connection tabs.



When attaching the clips connect from underneath the tab.



## Care and Maintenance



Always switch appliance to off, then switch off at the power outlet, then unplug the appliance prior cleaning or replacing either filter.

To clean the outside of the unit, wipe the exterior with a soft, damp cloth. Never use an abrasive cleaner.

Check and replace both the motor protection and micro dust filters on a regular basis.

### **Turbo Brush Head (model KVC16 only)**



The KVC16 comes with a specially designed Turbo brush head ideal for picking up pet hair and other difficult to vacuum items.

Use the switch on top of the head for long pile carpet  and for short pile and bare floors use .

From time to time hair, cotton and other items may get caught in the brushes of the Turbo Head and prevent it from spinning around. To remove such items, take a pair of scissors and cut the across the cotton, hair etc. to loosen, then gently pull to remove.

*NOTE: Do not continue to pull if the item/s does not easily come out as this may permanently damage the Turbo Head.*

### **KVC 11/12/15 Floor Tool**

Use the switch on top of the head for long pile carpet  and for short pile and bare floors use .



**Kambrook** 4 Kingston Town Close Oakleigh, Victoria 3166, Australia  
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337  
**Kambrook** (New Zealand) Mono Place Ellerslie, Auckland, New Zealand  
Customer Service Line/Spare Parts 0800 253 007 Customer Service Fax 0800 263 001

## Notes

---



**KAMBROOK**

**12 MONTH**

## **REPLACEMENT WARRANTY**

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

**For service, spare parts or product information in Australia**, please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

**For service, spare parts or product information in New Zealand**, please call KAMBROOK New Zealand, Mono Place, Ellerslie, Auckland. Phone 0800 253 007, FAX 0800 263 001.

If claiming under this guarantee the product must be returned to freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach purchase receipt here.

DATE OF PURCHASE \_\_\_\_\_

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER (If applicable) \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

Please don't return purchase record unless you are making a claim